

Cleaning:

- **Vinyl:** First remove any loose dust using a soft brush; the vinyl surface can then be cleaned with a mild detergent & rinsed with water before being sponge dried. Try to avoid any build up of water where the vinyl meets the partition frame, as this may cause the vinyl to lift from the backing material. Important note: Do not use thinners or other chemicals (except those specifically listed to clean vinyl) to clean the vinyl, as many floor cleaning materials contain substances harmful to vinyl.
- **Laminate:** First remove any loose dust using a soft brush; the laminate can then be cleaned with water & mild detergent before being sponge dried.
- **Melamine:** First remove any loose dust using a soft brush; the melamine can then be cleaned with water & mild detergent before being sponge dried.
- **Carpet:** Commercial carpet cleaners may be used to clean carpeted surfaces. Follow the manufactures listed instructions.
- **Veneer:** All veneers are prone to mellowing over a period of time. Direct sunlight onto a veneered surface will accelerate this process. General cleaning can be carried out with a soft cloth & the surface wiped over. The use of aerosol furniture polishes can also be used to maintain the sheen of the lacquered surface. Light marks can be cleared with a slightly damp cloth, providing the lacquered surface is not broken.
- **Aluminium track/panel trims:** The aluminium can be cleaned using water and a mild detergent.
- **Glass Panels:** Remove any loose dust with a soft non-scratching brush. The glass can then be cleaned with water and a mild detergent. Dry off with squeegee or window leather.

Maintenance:

Hufcor partitions are designed to require very little maintenance.

Regular maintenance is normally confined to occasional cleaning of the track & the application of a light silicon spray to assist the movement of the carriers.

Locks, hardware & general operation should be checked periodically.

After prolonged use, it may be advisable to change the seals.

Whilst panels & partition units can be removed for repair or replacement, it is important to ensure that any such work, is only carried out by a fully qualified engineer.

Problems should be reported immediately, particularly if the partition becomes stiff to operate. Refer to the warranty details & project details for further information.

HUFCOR UK LTD

Millhouse Business Centre, Suite 21
Station Road, Derbyshire DE74 2NJ
Tel.: +44 (0)1332 813947
Fax: +44 (0)1332 813930
Email: enquiries@hufcoruk.co.uk
Web: hufcoruk.co.uk